


Table D: 4WD Indicator and 4WD Low Indicator Flashes at Intervals of 0.2 Seconds

Wiring Diagram

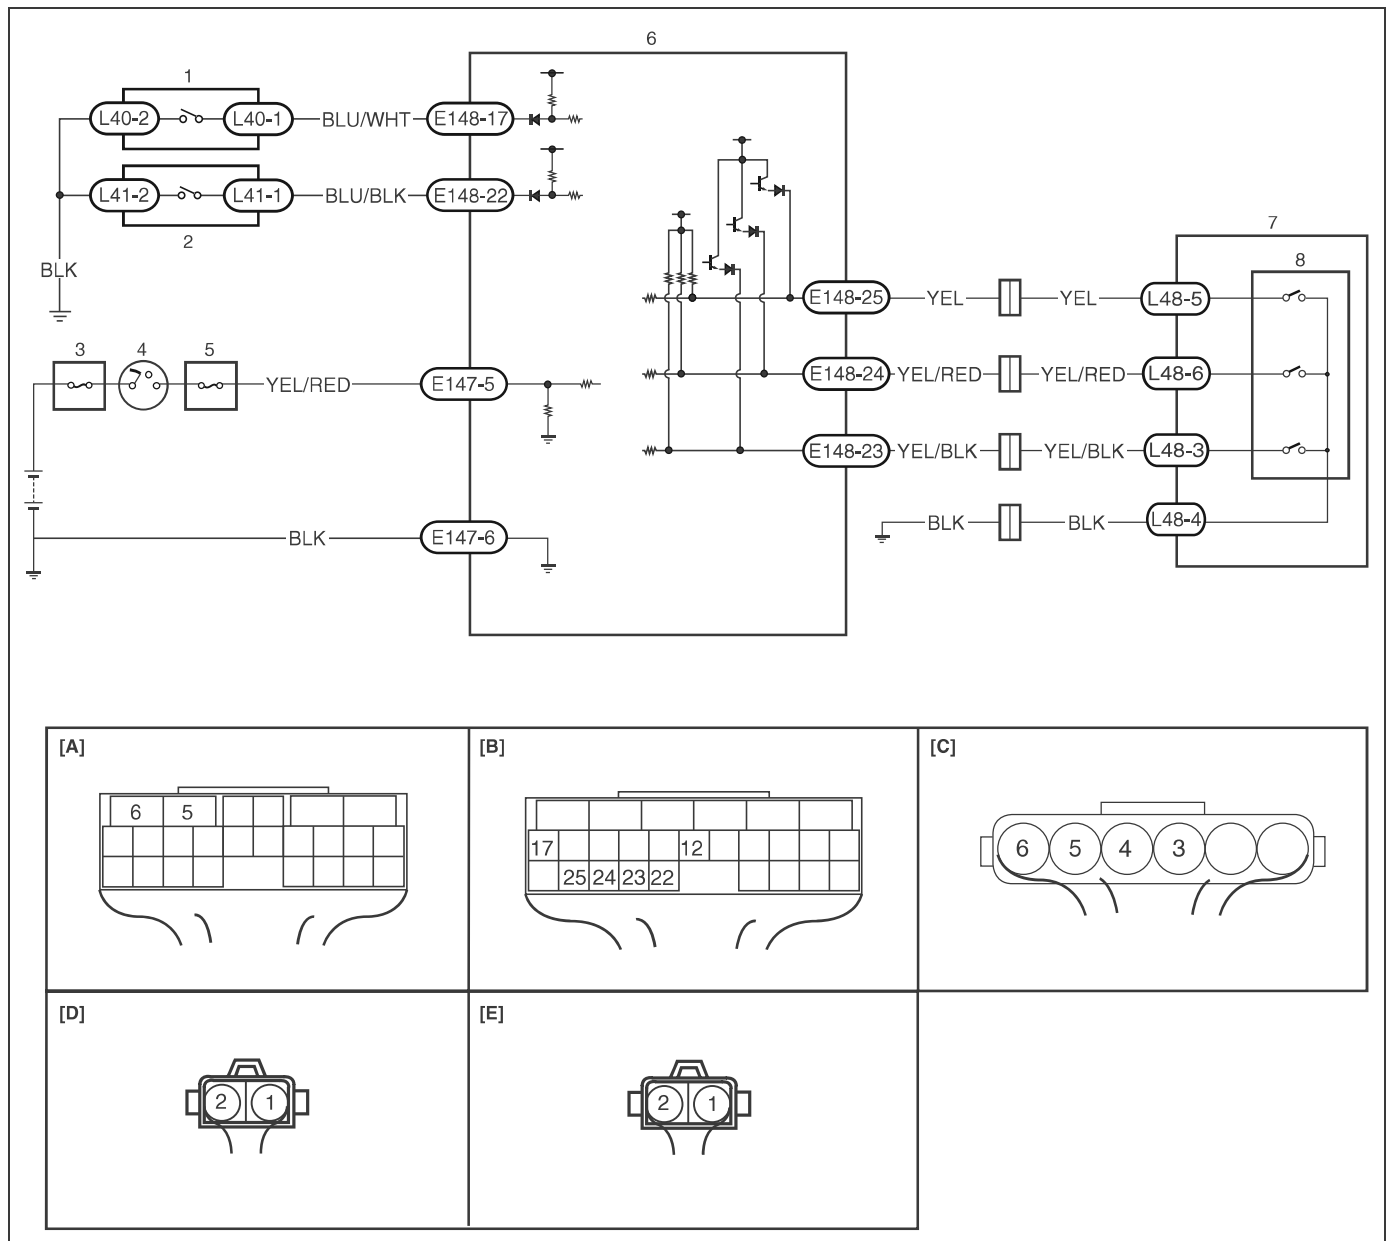

[A]: Transfer control module connector "E147" viewed from harness side	1. 4WD low switch	6. Transfer control module
[B]: Transfer control module connector "E148" viewed from harness side	2. 4WD switch	7. Transfer shift actuator
[C]: Transfer shift actuator connector "L48" viewed from harness side	3. Main fuse	8. Transfer shift actuator limit switch
[D]: 4WD low switch connector "L40" viewed from harness side	4. Ignition switch	
[E]: 4WD switch connector "L41" viewed from harness side	5. "4WD" fuse	