

1. Camshaft position sensor
2. Manifold absolute pressure sensor
3. Throttle position sensor
4. Engine coolant temp. sensor
5. Intake air temp. sensor
6. Ignition timing adjusting resistor
7. CO adjusting resistor (w/o HO2S)
8. Heated oxygen sensor (if equipped)
9. Vehicle speed sensor
10. Heater blower switch
11. A/C control module (if equipped)
12. Lighting switch
13. Stop lamp switch
14. Rear defogger switch (if equipped)
15. Power steering pressure switch
16. Data link connector
17. Immobilizer control module (if equipped)
18. Tacho meter (if equipped)
19. ABS control module (if equipped)
20. R-range switch (A/T)
21. A/T control module (A/T)
22. Engine control module
23. Fuel injector No.1
24. Fuel injector No.2
25. Fuel injector No.3
26. Fuel injector No.4
27. EGR valve (if equipped)
28. EVAP canister purge valve (if equipped)
29. IAC valve
30. Fuel pump relay
31. A/C condenser fan motor relay (if equipped)
32. Monitor connector
33. Malfunction indicator lamp
34. Ignition coil assembly for No.2 and No.3
35. Ignition coil assembly for No.1 and No.4
36. Ignition switch
37. Main relay
38. Park/Neutral position switch (A/T)
39. Starter magnetic switch
40. Battery

A1	Bl/B	Power source
A2	B	Ground
A3	P/B	A/C condenser fan motor relay (if equipped)
A4	W/G	Fuel pump relay
A5	V/Y	Malfunction indicator lamp
A6	Br/W	Ignition coil assembly for No.1 and No.4
A7	Gr/R	EGR valve (stepper motor coil 3, if equipped)
A8	Gr	EGR valve (stepper motor coil 1, if equipped)
A9	W/G	Fuel injector No.3
A10	R/W	Fuel injector No.1
A11	P/B	Heater of HO2S (if equipped)
A12	—	—
A13	B/Bl	Ground
A14	Bl/B	Power source
A15	W	Power source for back up
A16	B/W	Ignition switch (if equipped)
A17	Bl	Main relay
A18	R/W	IAC valve (stepper motor coil 1)
A19	Br/B	Ignition coil assembly for No.2 and No.3
A20	Gr/B	EGR valve (stepper motor coil 4, if equipped)
A21	Gr/Bl	EGR valve (stepper motor coil 2, if equipped)
A22	W/B	Fuel injector No.4
A23	R/G	Fuel injector No.2
A24	—	—
A25	Bl/G	EVAP canister purge valve (if equipped)
A26	B/Bl	Ground
B1	Y/B	Data link connector
B2	P (RH:P/W)	Test switch terminal
B3	Bl/R	A/C signal (if equipped)
B4	R/Y	Lighting switch
B5	G	ABS signal (if equipped)
B6	Gr (RH:Gr/W)	A/C cut signal (if equipped)
B7	Br	Tacho meter
B8	R/G	Duty output terminal
B9	G/W	Stop lamp switch
B10	W/Bl	Diag. Switch terminal
B11	Bl/G	Heater blower switch
B12	R/W	Rear defogger switch (if equipped)
B13	G/Y	Park/Neutral position signal
B14	R	R-range signal
B15	B/Bl	Throttle opening signal
B16	B/Y	Overdrive cut signal
C1	W	Camshaft position sensor
C2	Y	Vehicle speed sensor
C3	R/Bl	CO adjusting resistor (w/o H2S)
C4	Lg (RH:Lg/Y)	Manifold absolute pressure sensor
C5	Lg	Throttle position sensor
C6	Lg (RH:Lg/W)	Engine coolant temp. sensor
C7	Lg/R	Power source for MAP sensor, TP sensor, CO adjust resistor
C8, C9, C10	—	—
C11	B/R (MT:B/Y)	Engine start signal
C12, C13	—	—
C14	Or (RH:Or/G)	Ignition timing adjusting resistor
C15	Or	Heated oxygen sensor (if equipped)
C16	Lg/B	Intake air temp. sensor
C17	B/Bl	Ground
C18	B/Bl	Ground
C19, C20, C21	—	—
C22	Bl/Or	Power steering pressure switch